



## SIDE WINDOW INSTALLATION

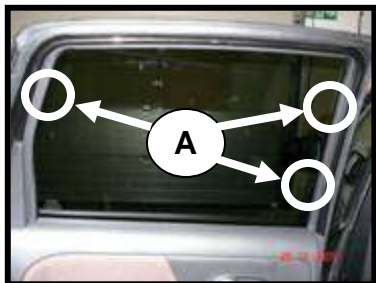



## PORT WINDOW INSTALLATION

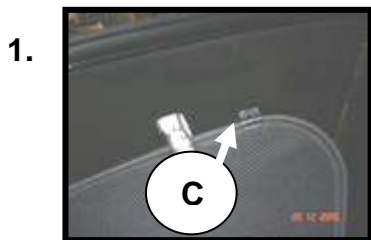

## TAILGATE WINDOW INSTALLATION

### WARNING



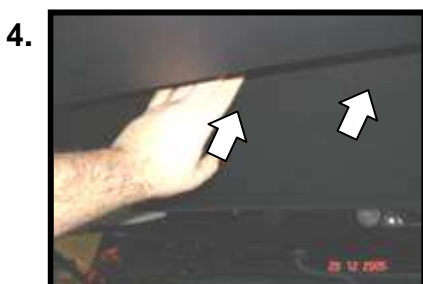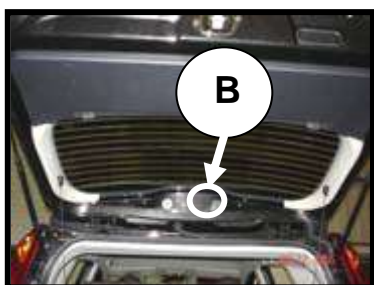





1. It is important that you clean the surface using the wipes provided before installing the clips
2. Once the clips have been fitted, leave them to stand for 30 mins before installing the sunshades.
3. Clips must not be removed once fitted.



NIS-NOTE-5-A  
NISSAN NOTE  
5 DOOR



**Contents:**

 X1	 X2	 X2	 X1	<b><u>Hardware Pack</u></b> 2 X Tailgate shades 2 X Rear Side Shades 2 X Port Windows 1 X Fitting Tool (D)
 X6 A	 X1 B	 X2 C	 X1	<b><u>Accessory Kit</u></b> 6 X A Fitting Clips 2 X B Fitting Clips 2 X C Fitting Clips 1 X Cleaning Wipes



**WARNING**

Please read these fitting instructions BEFORE installing the sunshades. Take care not to scratch any paint work when fitting the clips